



FRANK


Инструкция по установке душевых кабин Frank

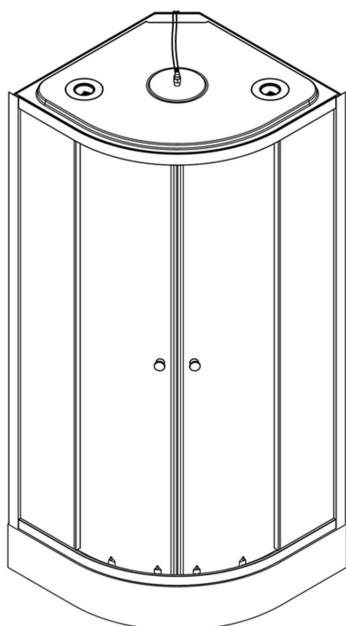


80X80 cm
90X90 cm
100X100 cm

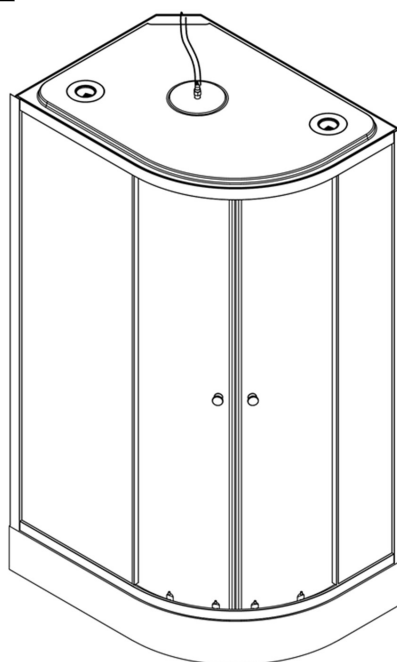


80x100 cm
80x110 cm
80x120 cm




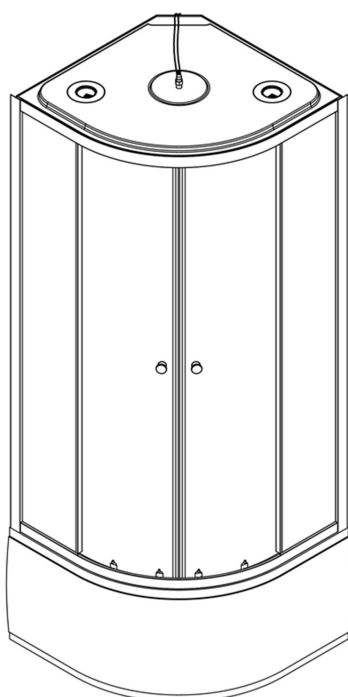


80X80 cm
90X90 cm
100X100 cm

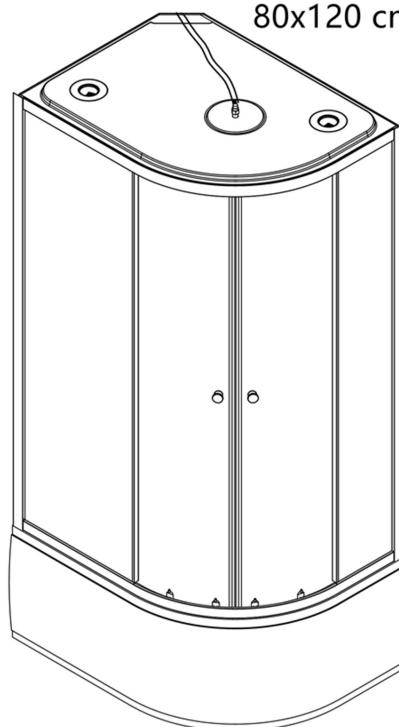

80x100 cm
80x110 cm
80x120 cm

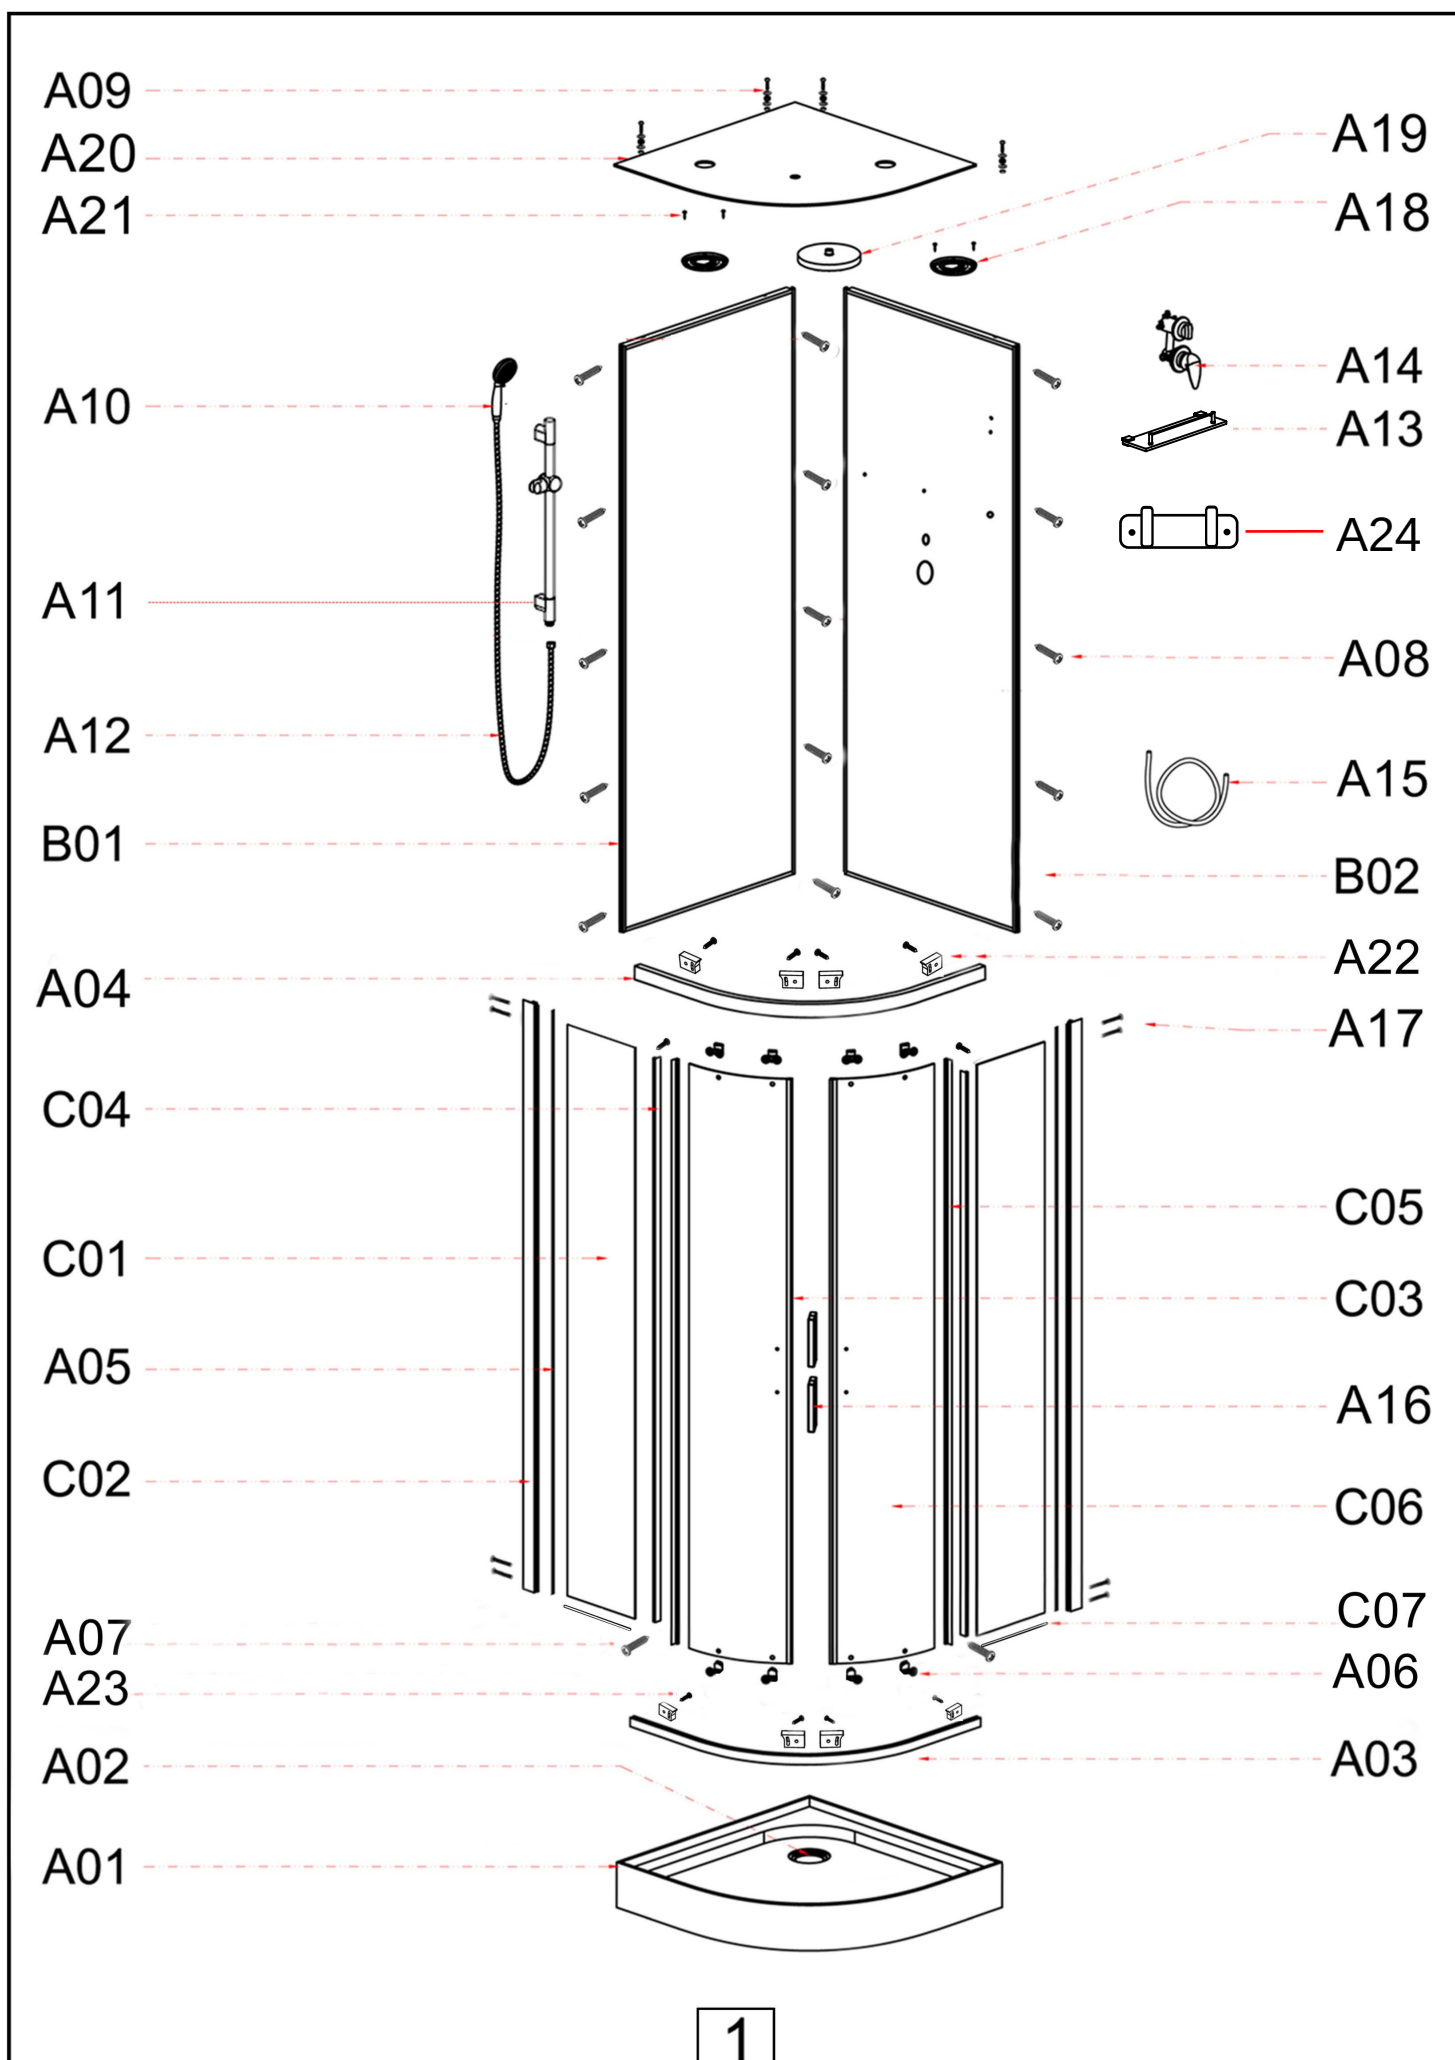

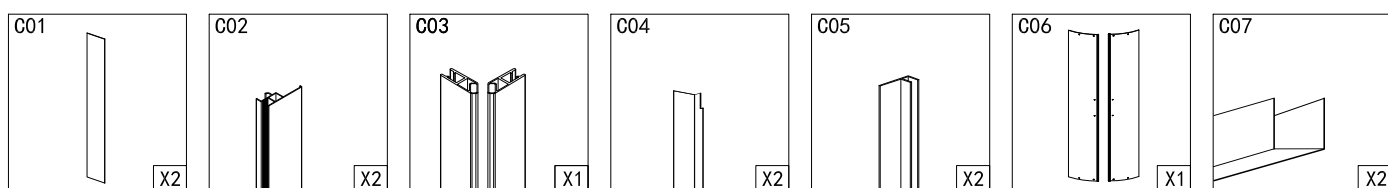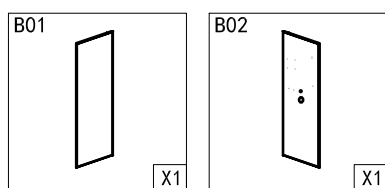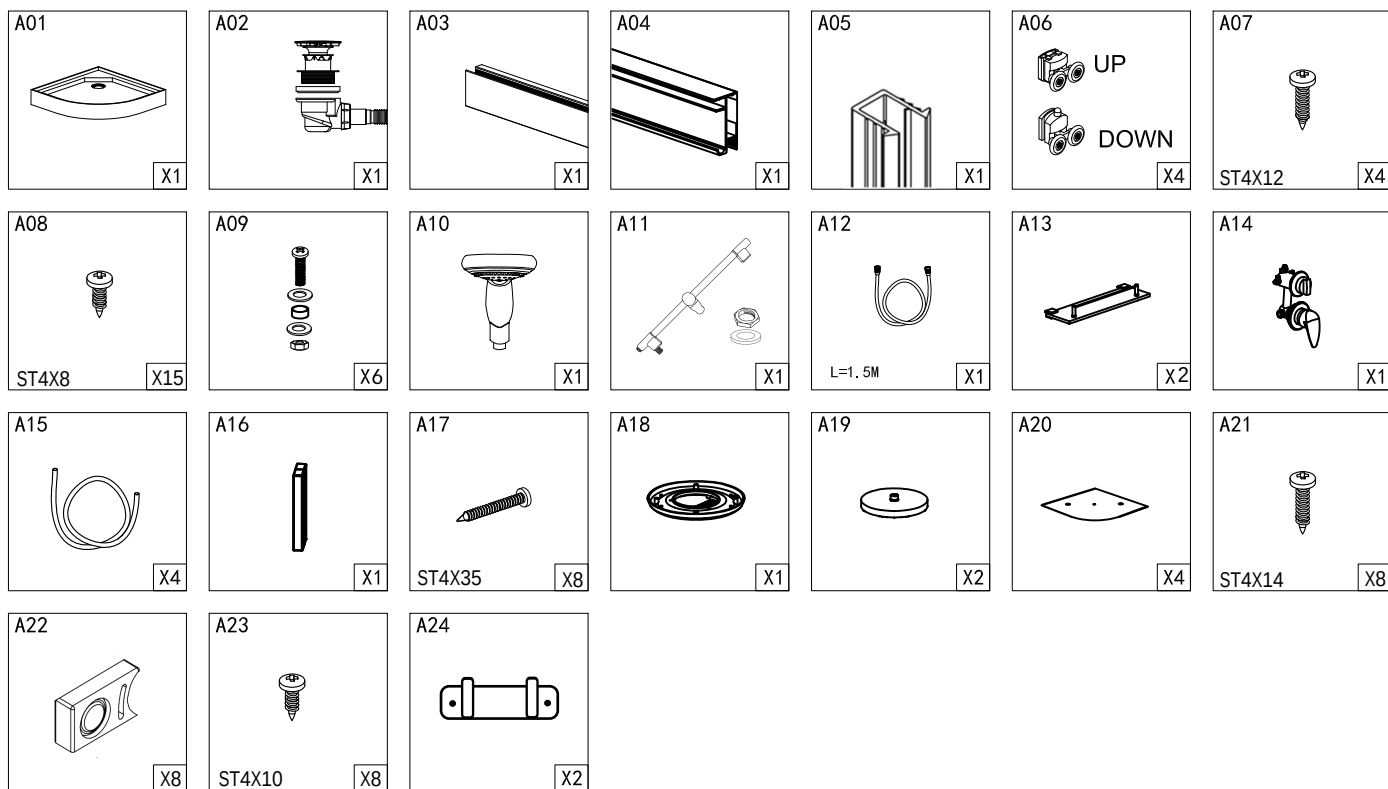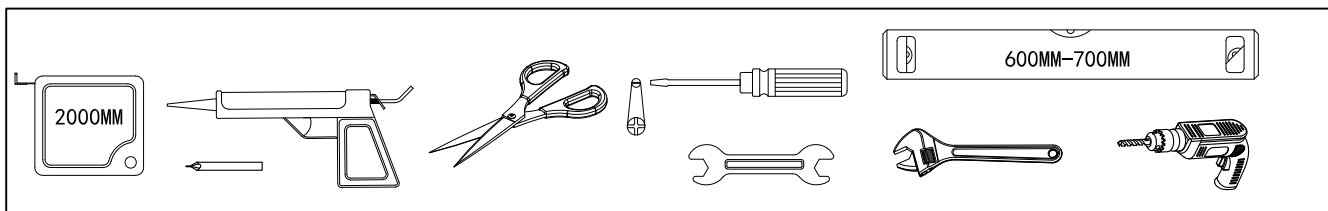


D1


1PCS

D2

1PCS

D3

1PCS


D4

L=365MM*4


4PCS

D5

21PCS

D6

3PCS

D7

4PCS

D8

8PCS

D9

ST4X20

24PCS


D10

1PCS


D11

ST4X35

5PCS

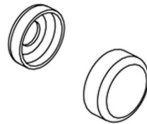D12

3PCS


D13







6PCS




D14


ST4X25

3PCS

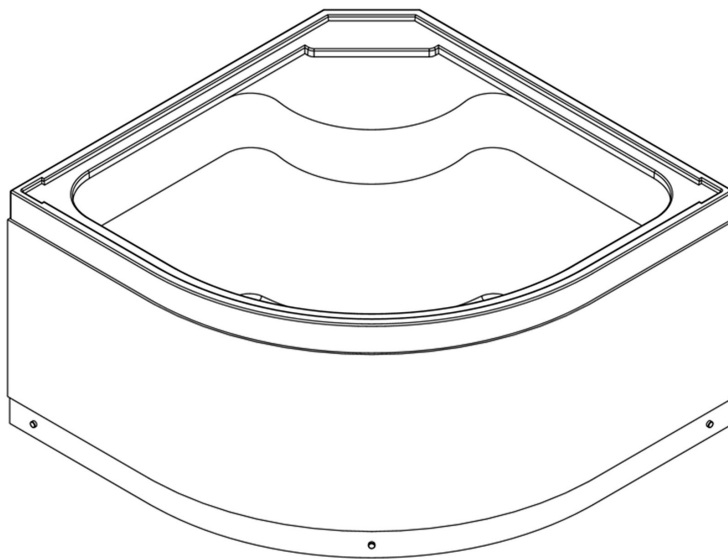

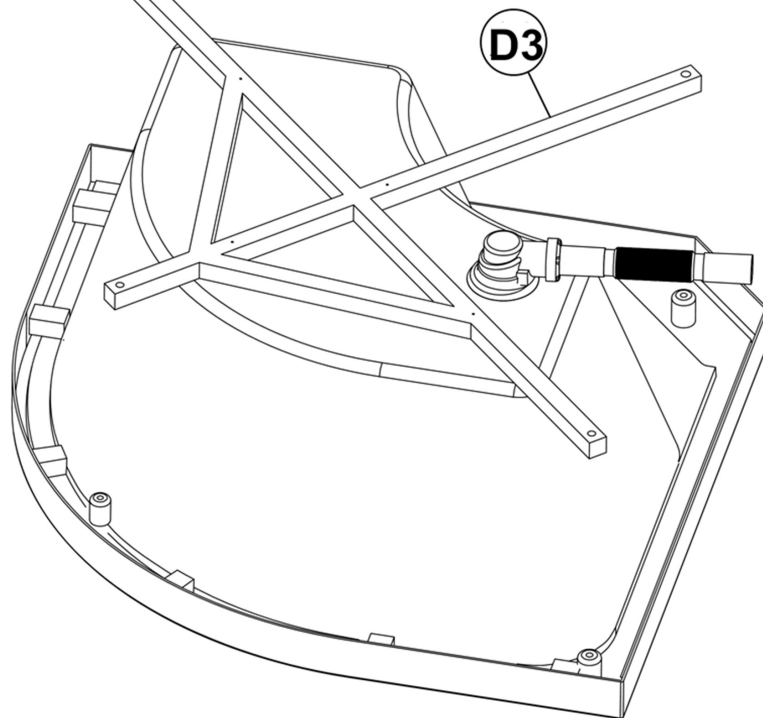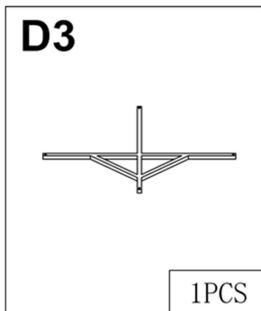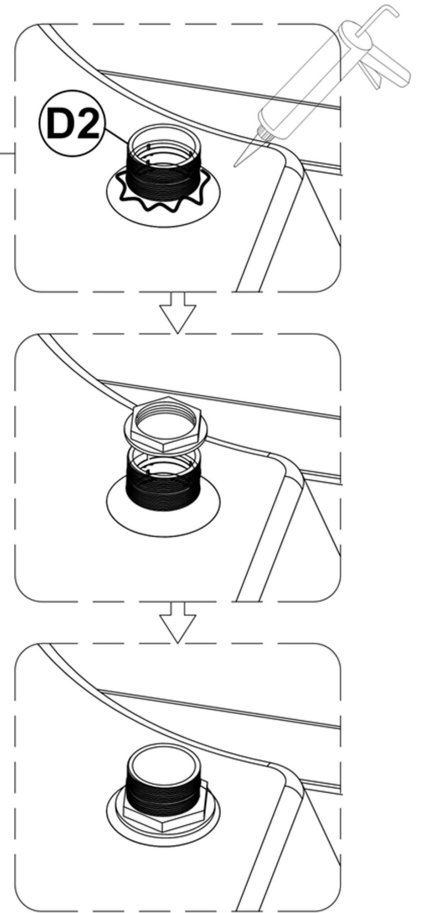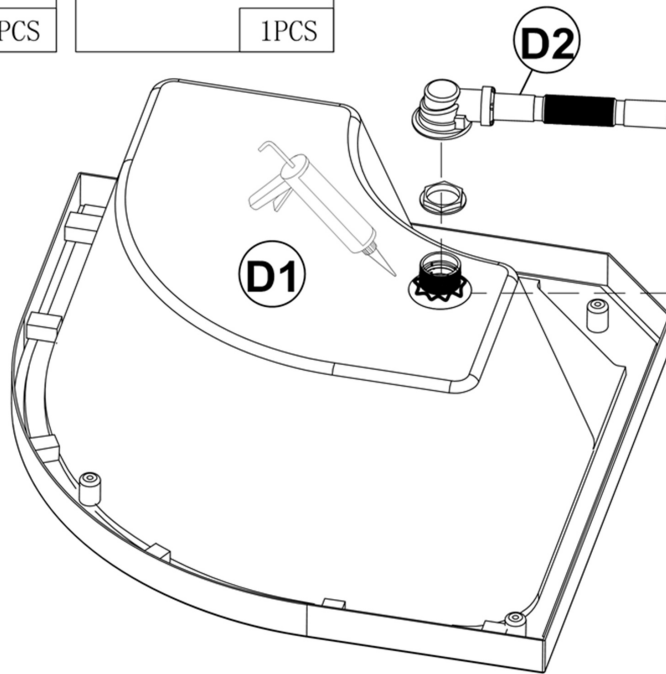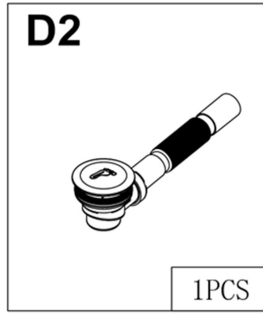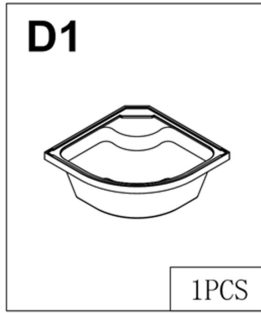

D4  L=366MM*4 4PCS	D5  16 PCS	D6  3PCS	D7  4PCS	D8  6PCS
---	--	--	--	--

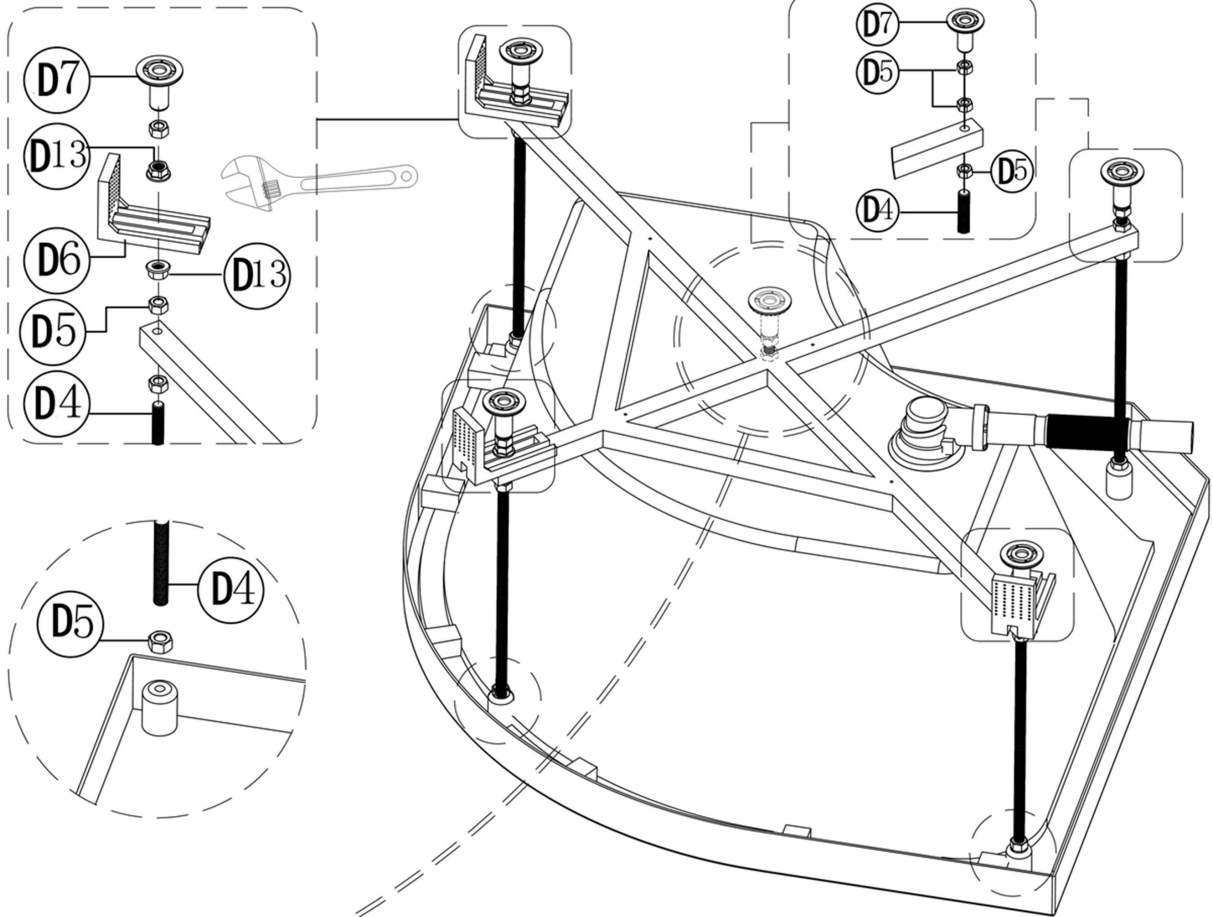

100-120CM

D1  1PCS	D2  1PCS	D3  1PCS	D4  L=105MM*1  L=365MM*4 1PCS	D5  21PCS	D6  3PCS	D7  5PCS
D8  8PCS	D9  ST4X20 24PCS	D10  1PCS	D11  ST4X35 5PCS	D12  3PCS	D13  6PCS	D14  ST4X25 3PCS

D8



8PCS

D9





ST4X20

16PCS


D10



1PCS

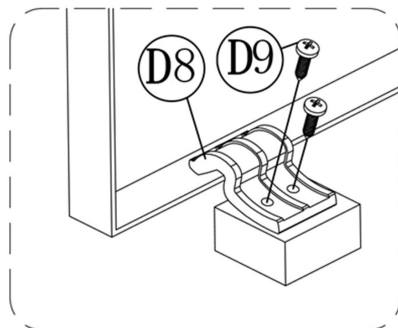

D10

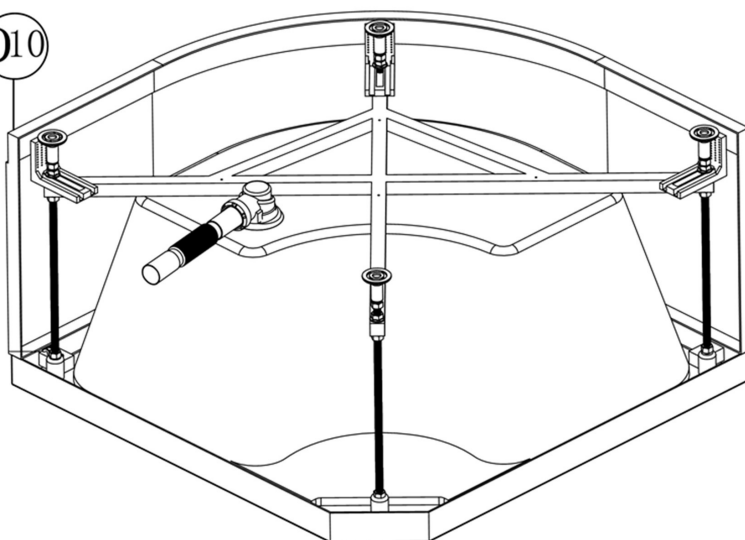

D14



ST4X25

3PCS

D11





ST4X35

5PCS



D12




3PCS

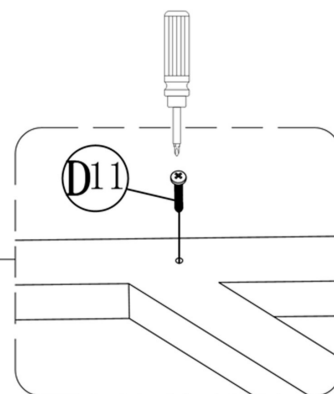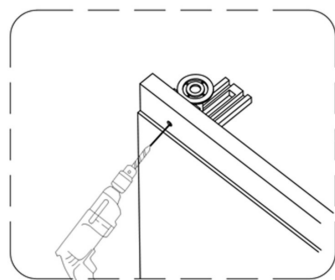

D11

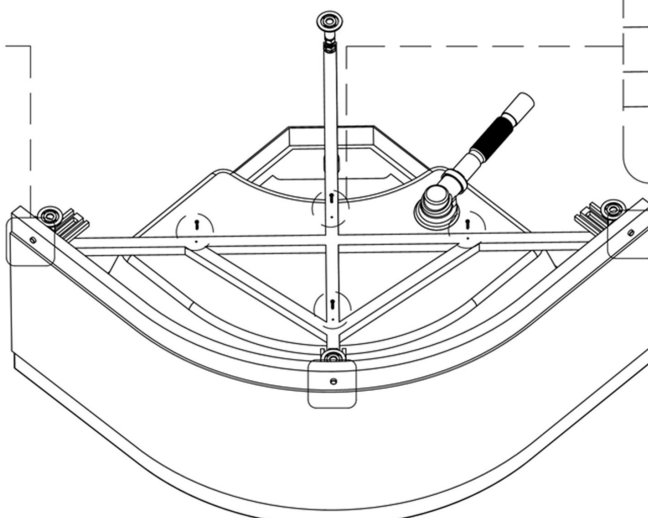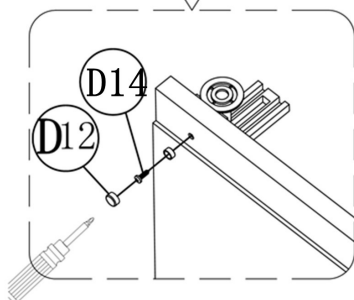


A01



X1

A02

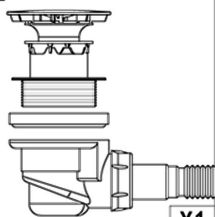

X1



2000MM

A02

