


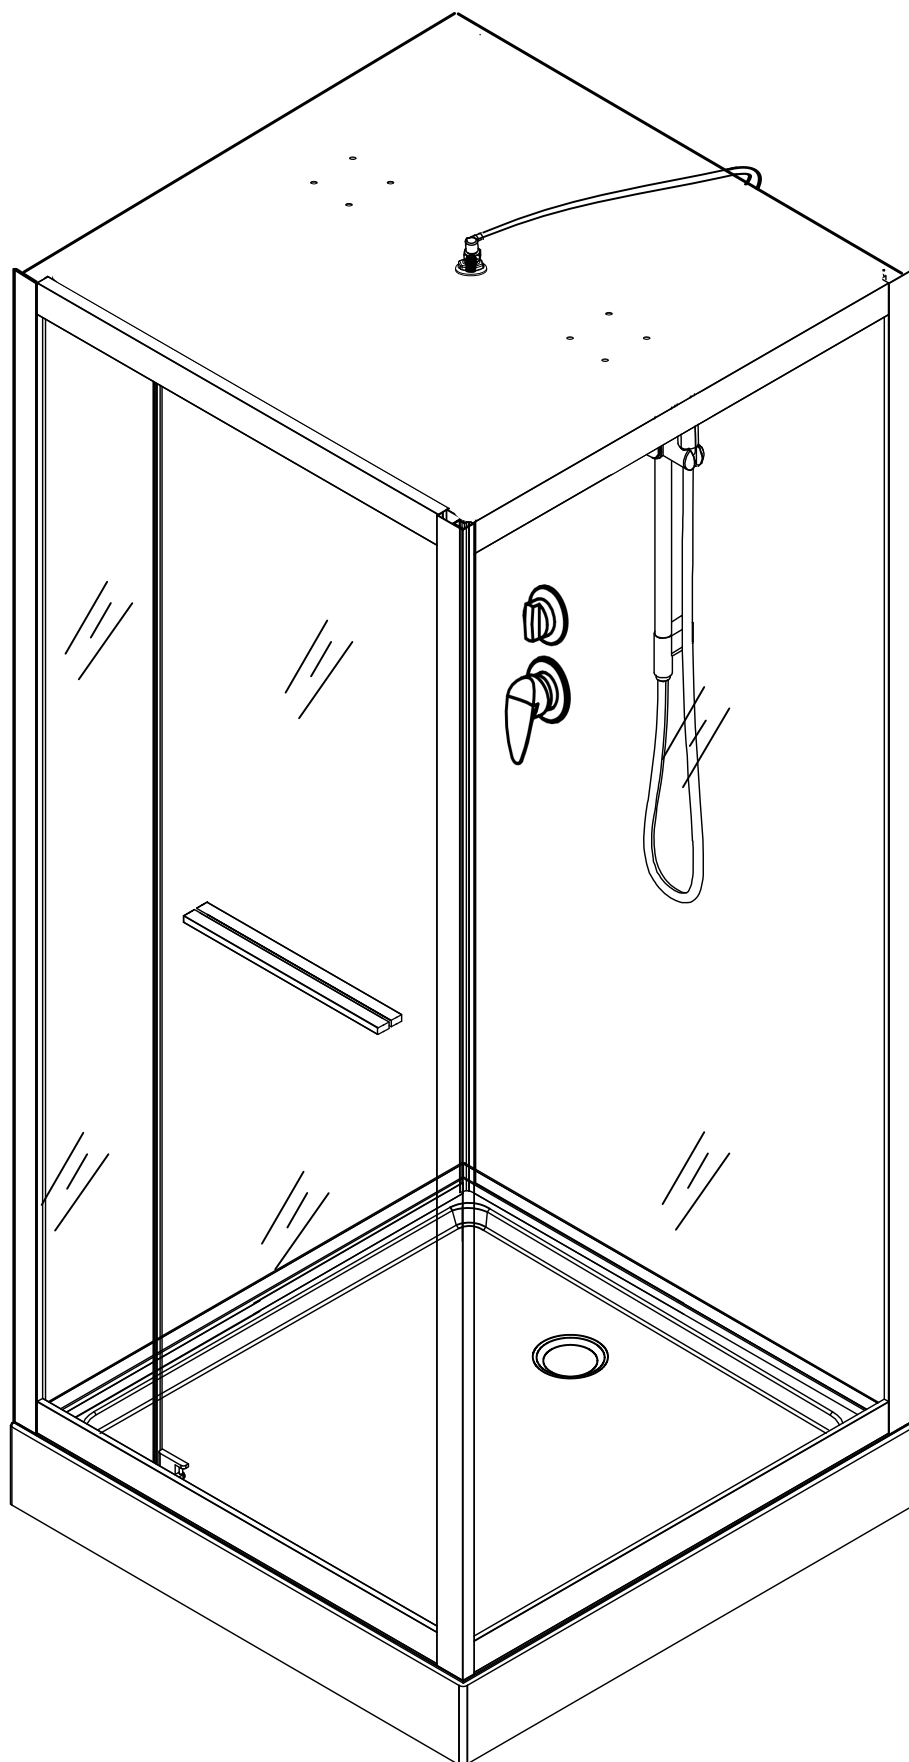
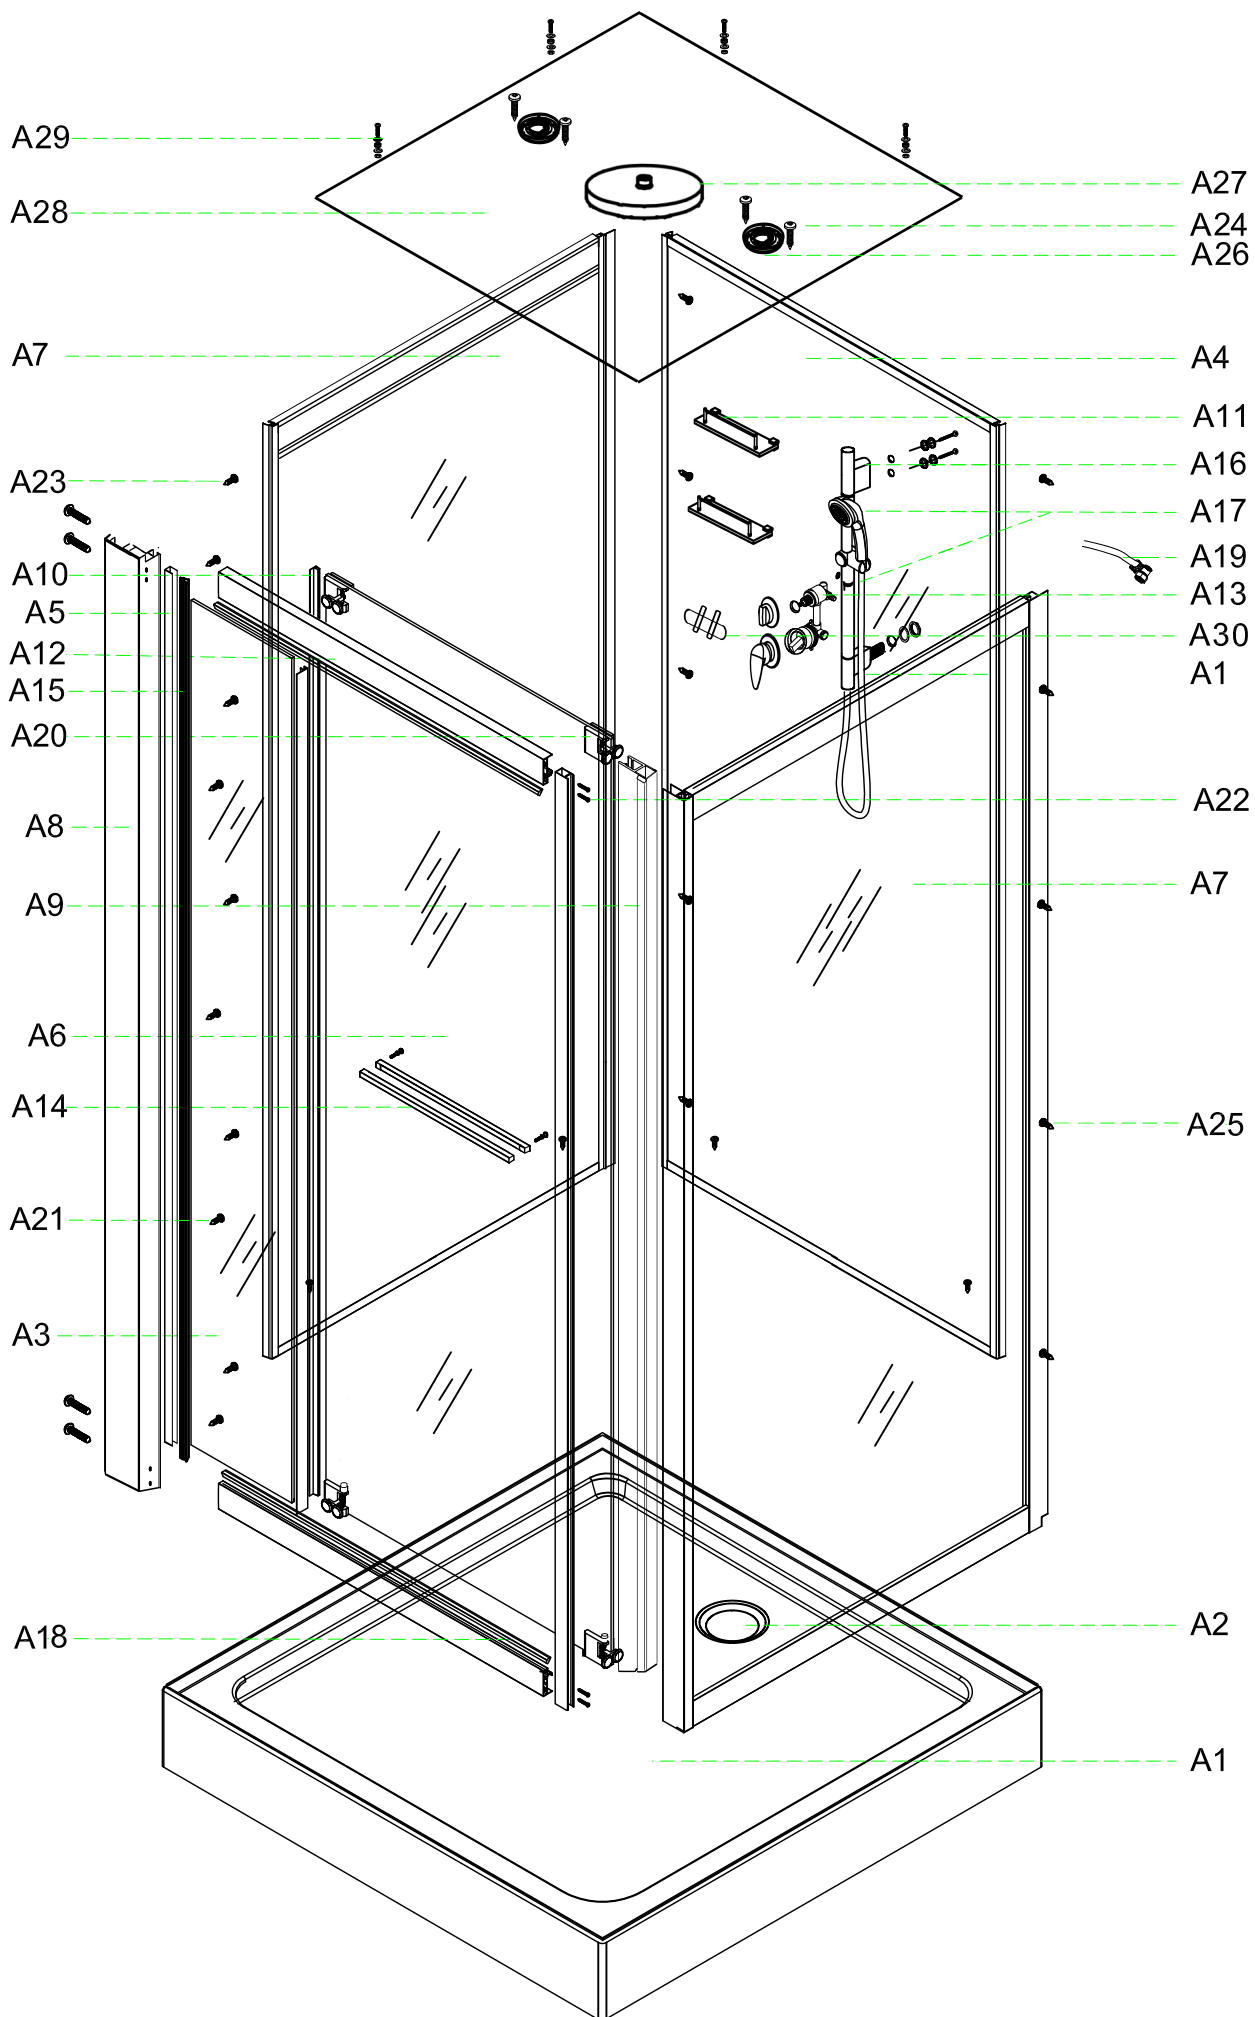






















FRANK



Инструкция по установке душевых кабин Frank

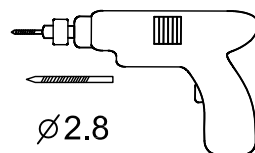












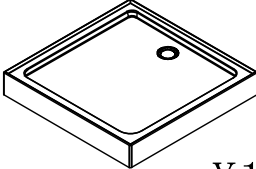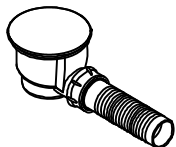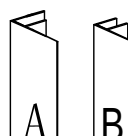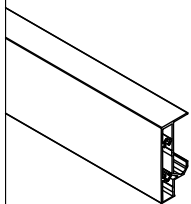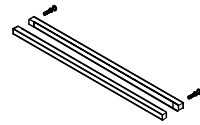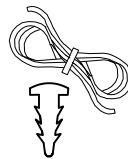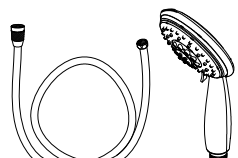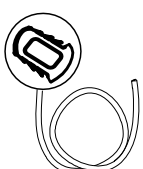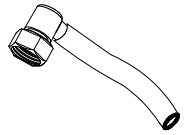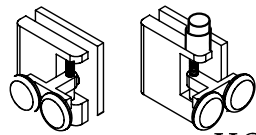
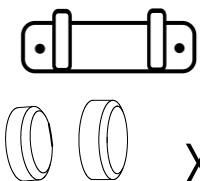
A1  X1	A2  X1	A3  X1	A4  X1	A5  X1
A6  X1	A7  X2	A8  X2	A9  X1	A10  Широкий Узкий A B X1
A11  X2	A12  X2	A13  X1	A14  X1	A15  X1
A16  X1	A17  X1	A18  X2	A19  L=0.4M L=1.5M X1	A20  Топ Нижнее X2
A21  ST4X10 X5	A22  ST4X35 X8	A23  ST4X10 X10	A24  ST4X16 X8	A25  ST4X12 X12
A26  X2	A27  X1	A28  X1	A29  ST4X16 X4	A30  X1

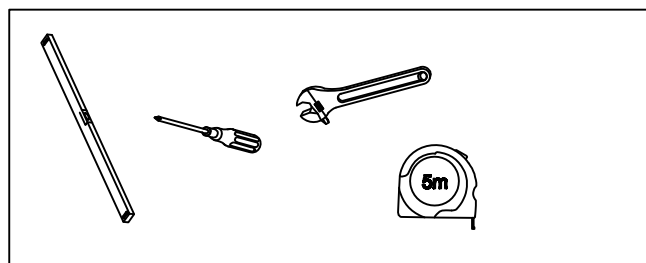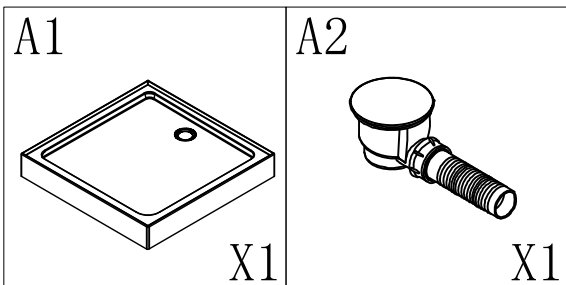



***Пожалуйста, убедитесь, что поднос сохраняет уровень

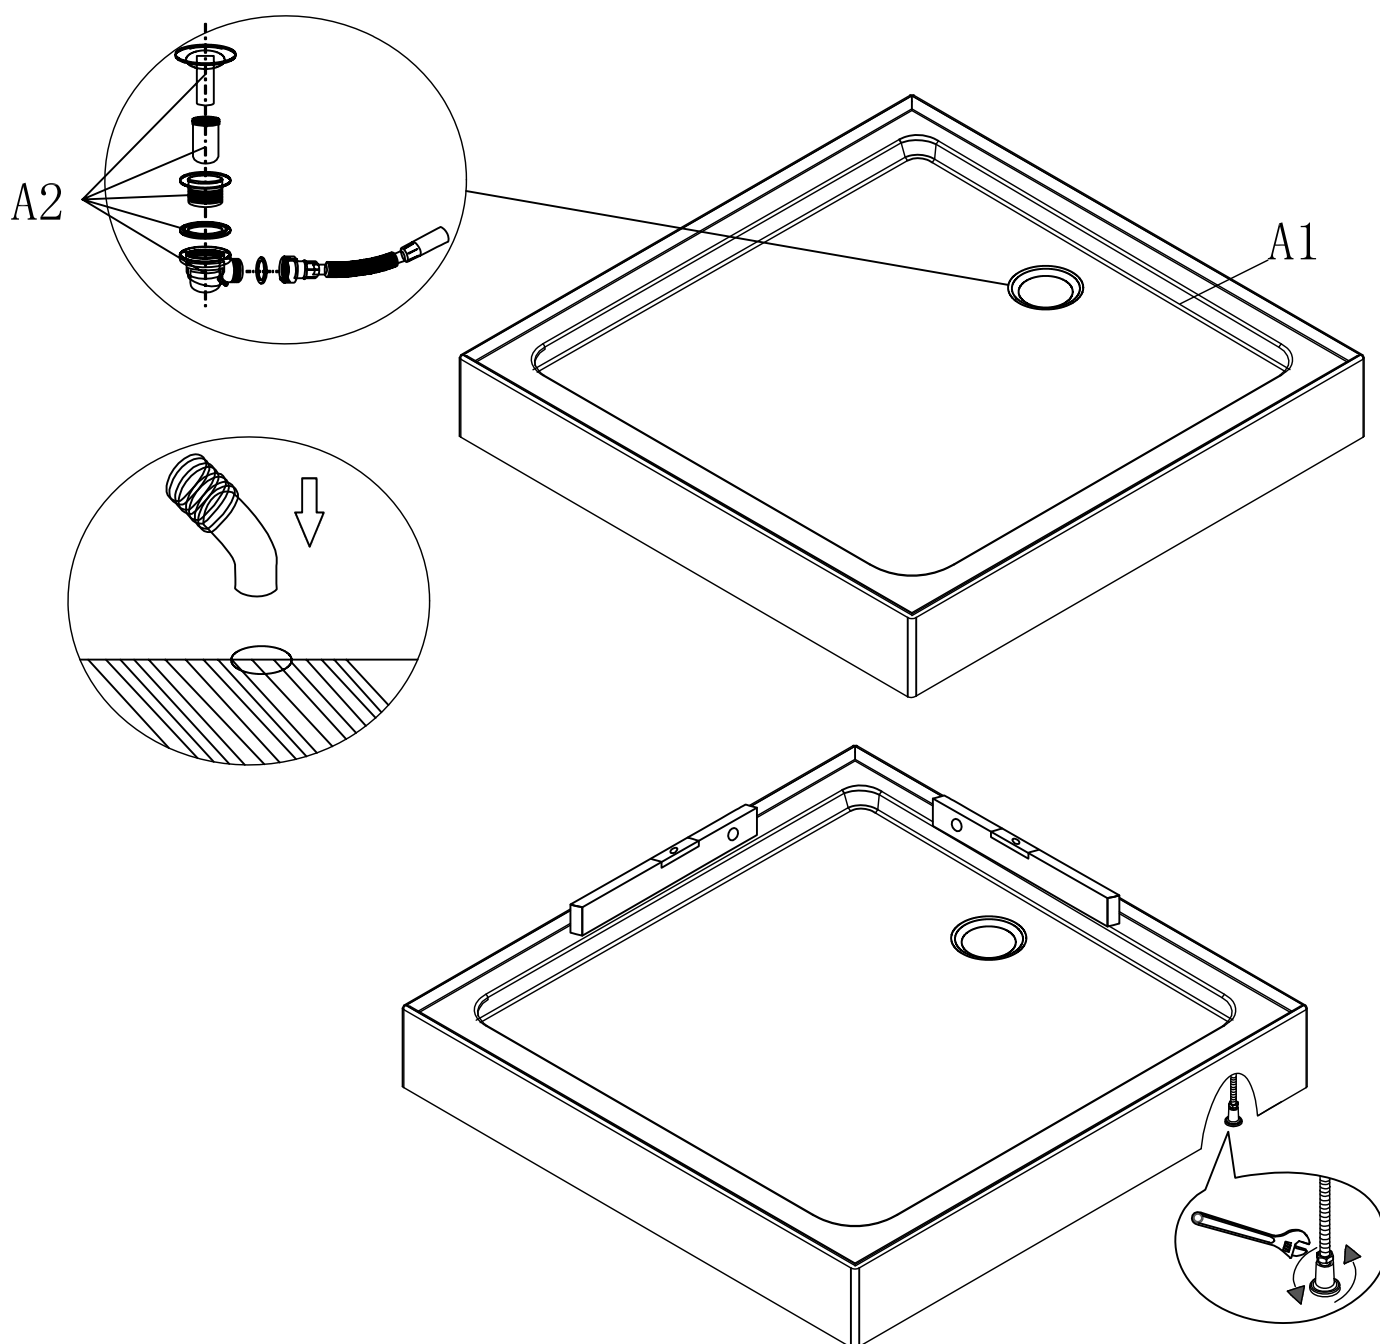

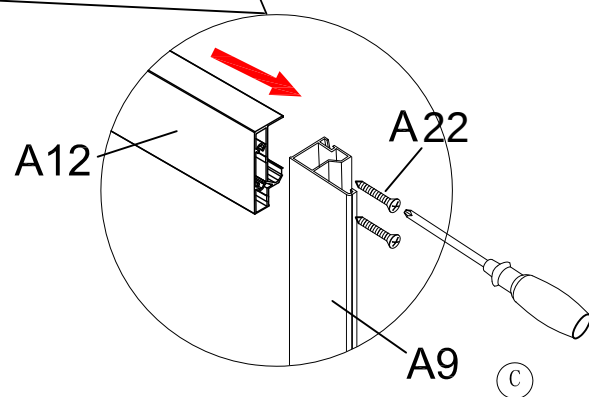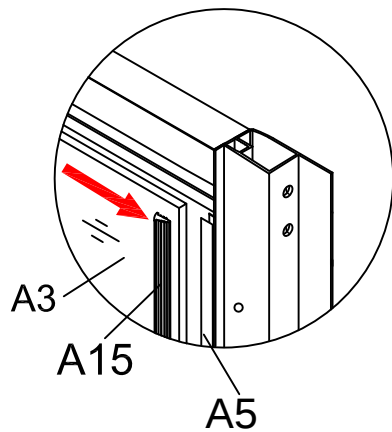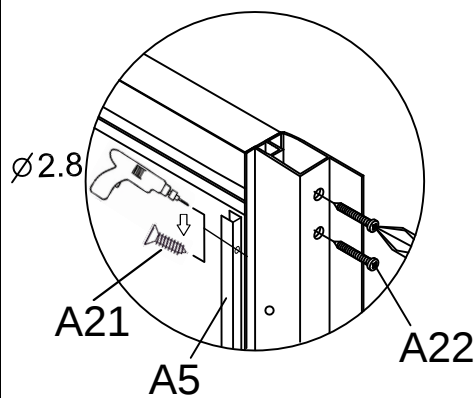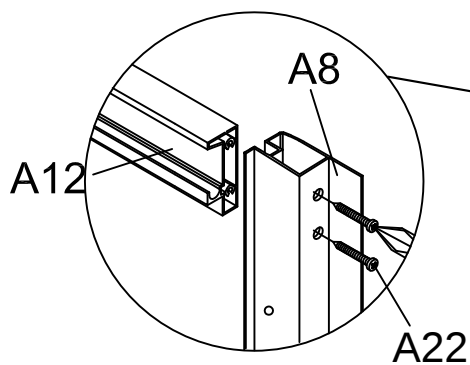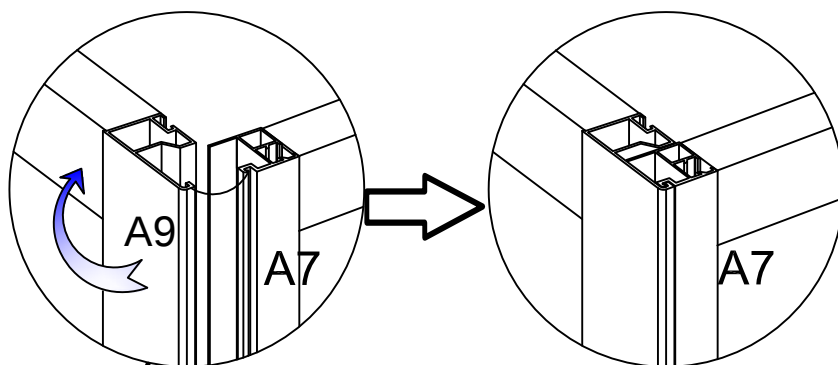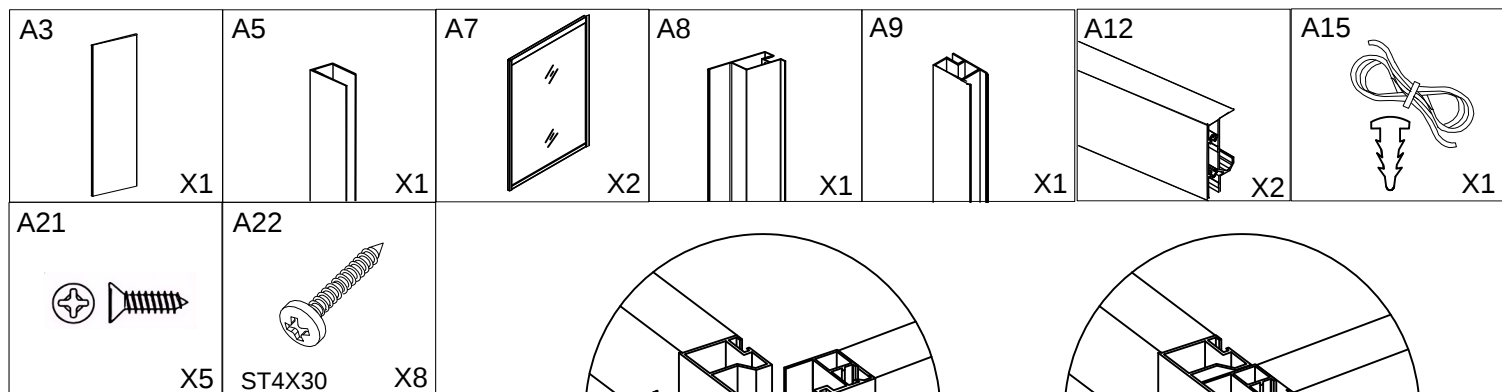

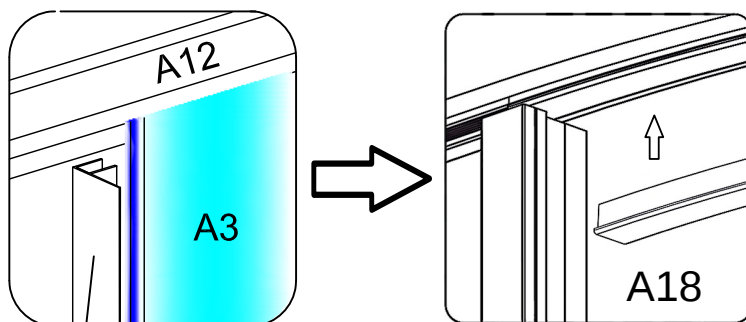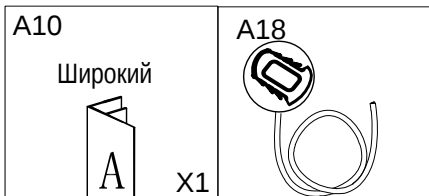


A10

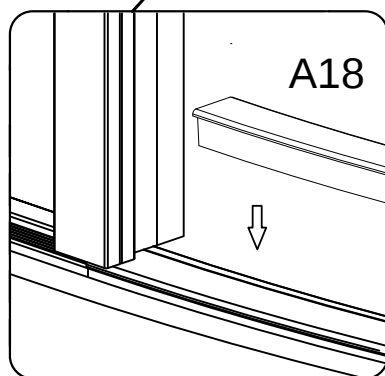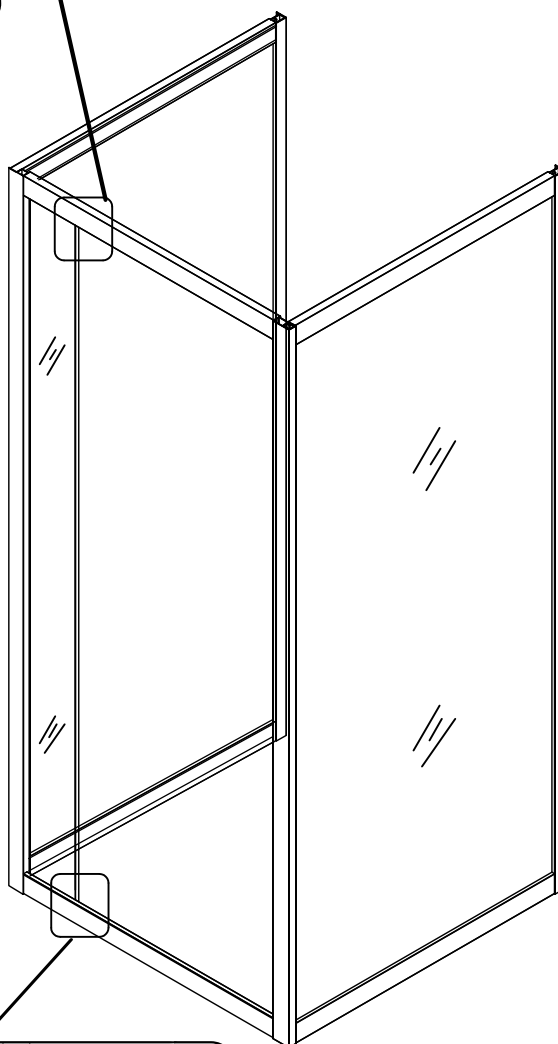


A25





ST4X12 X12

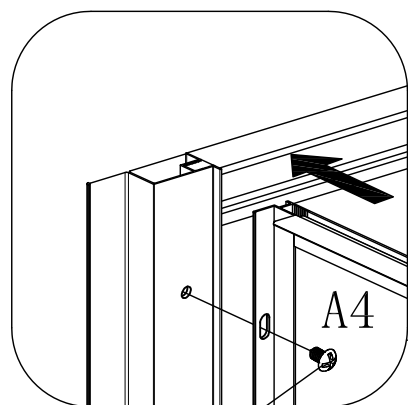



ST4X12=10








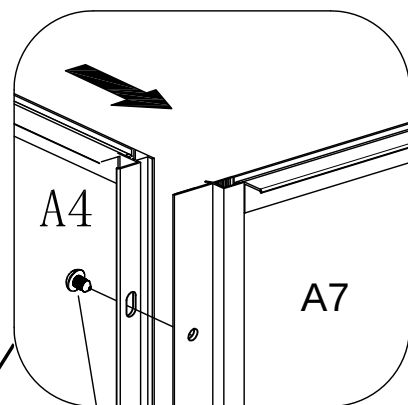


ST4X12=5

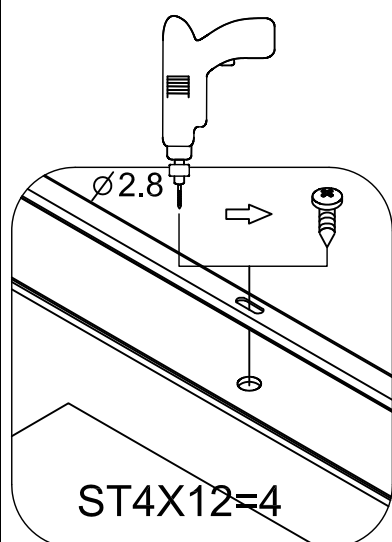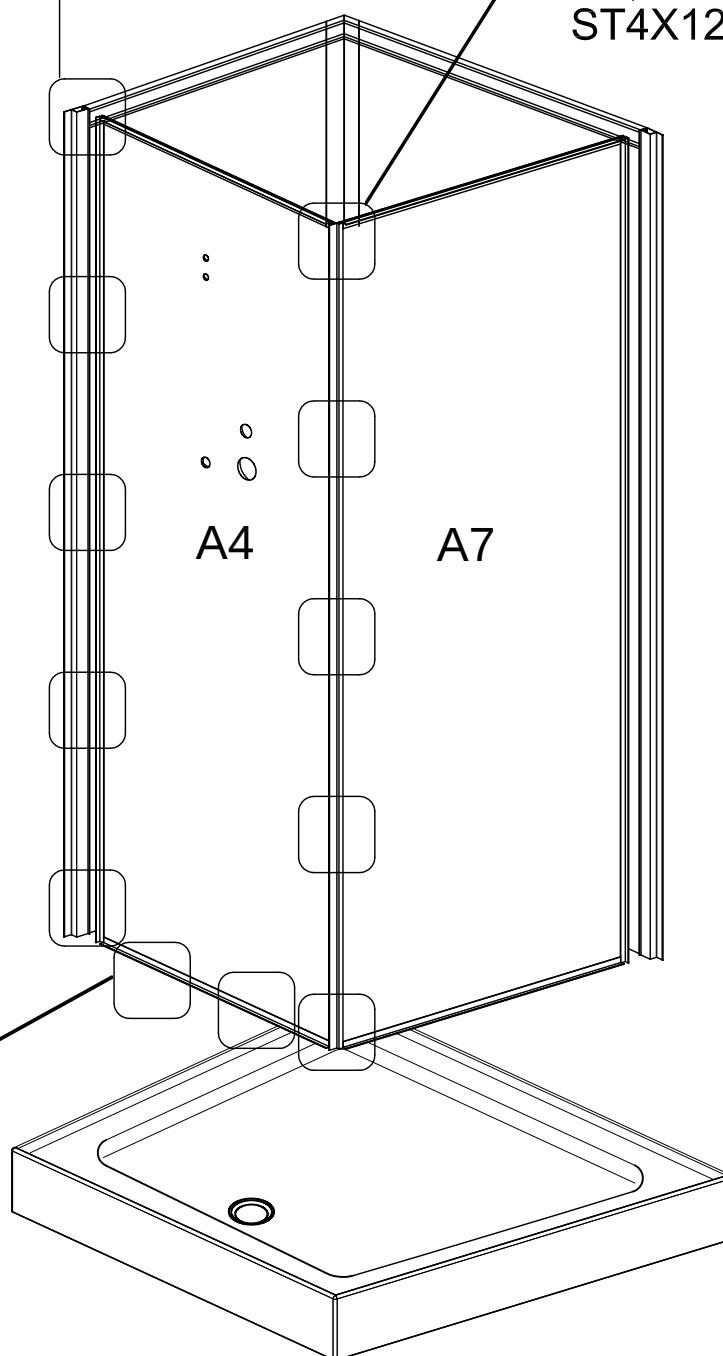


ST4X12=4



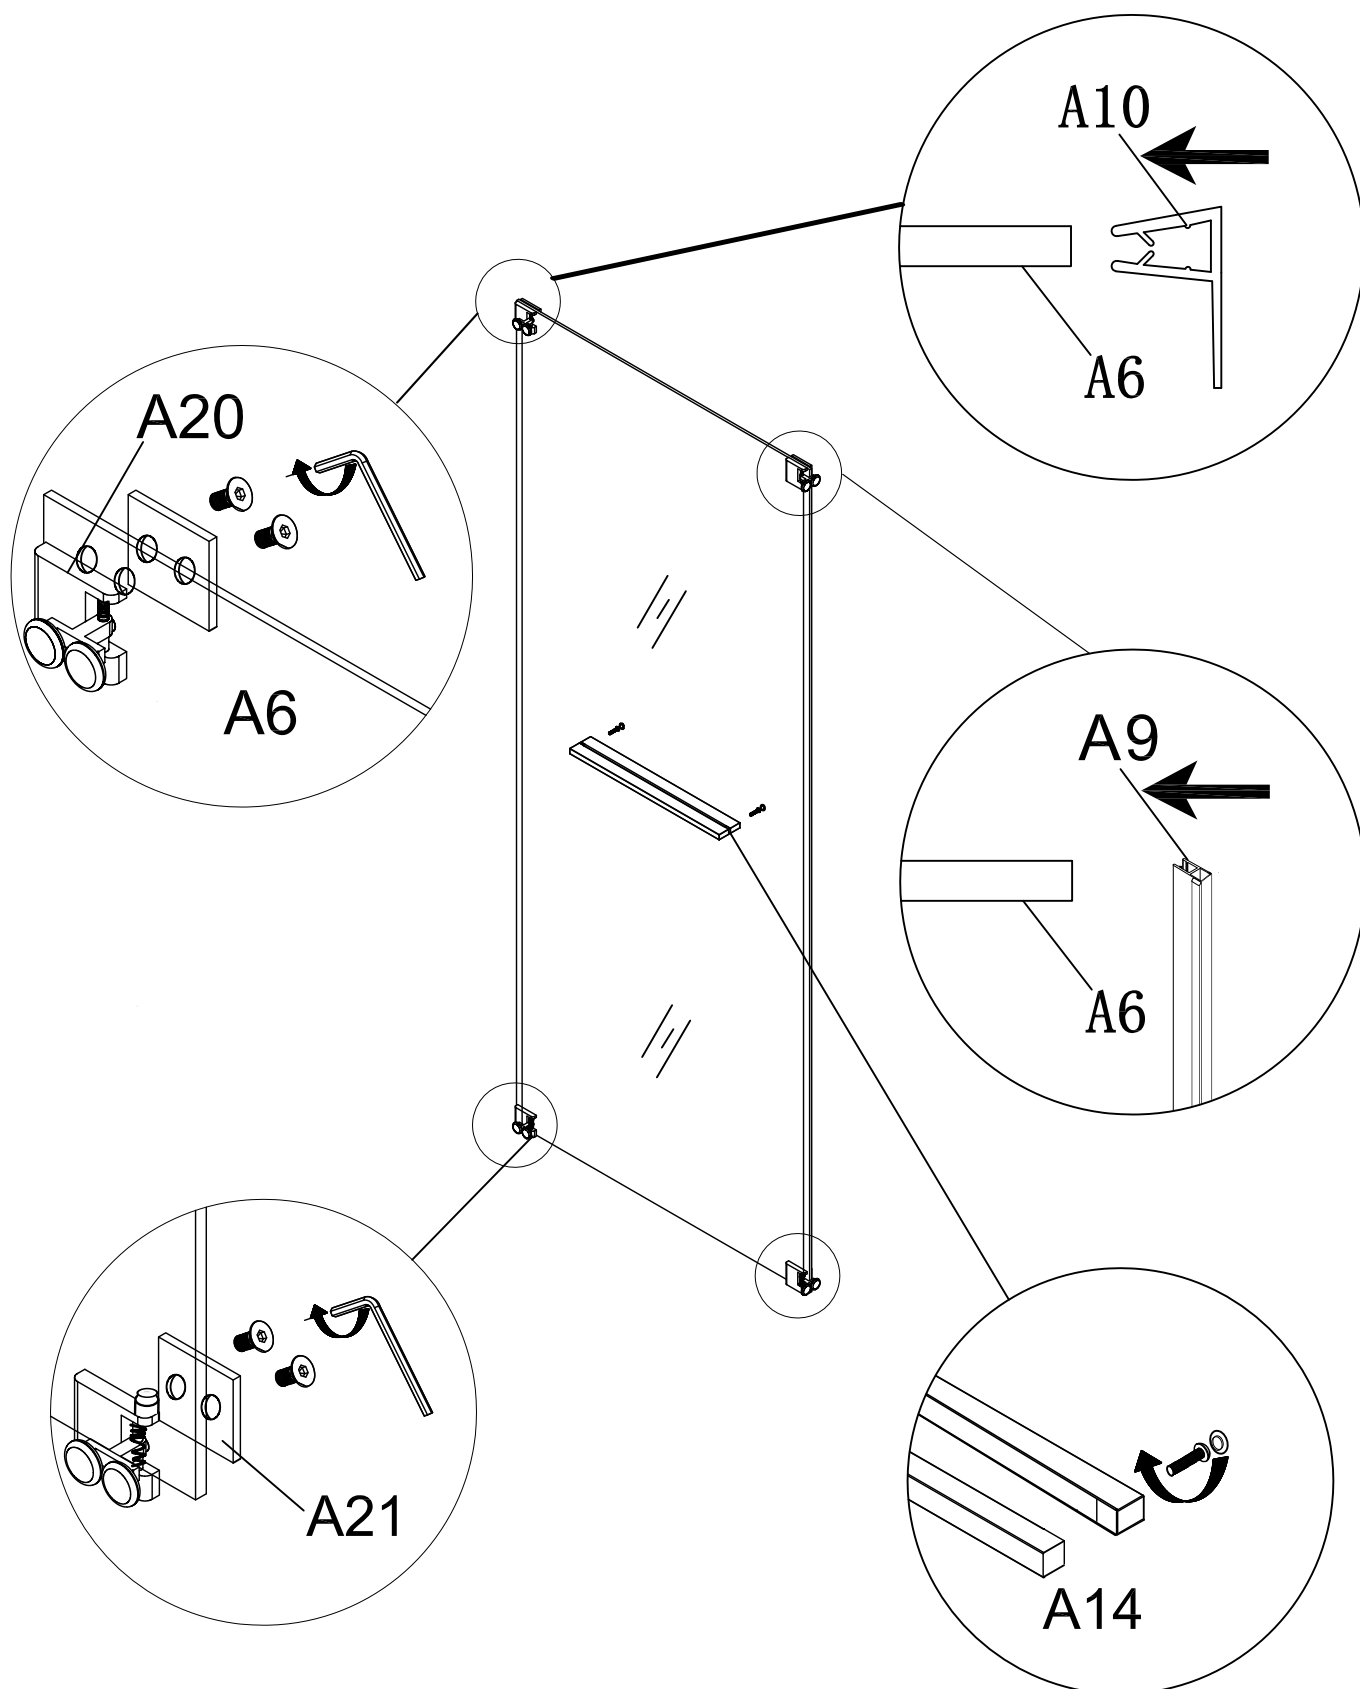
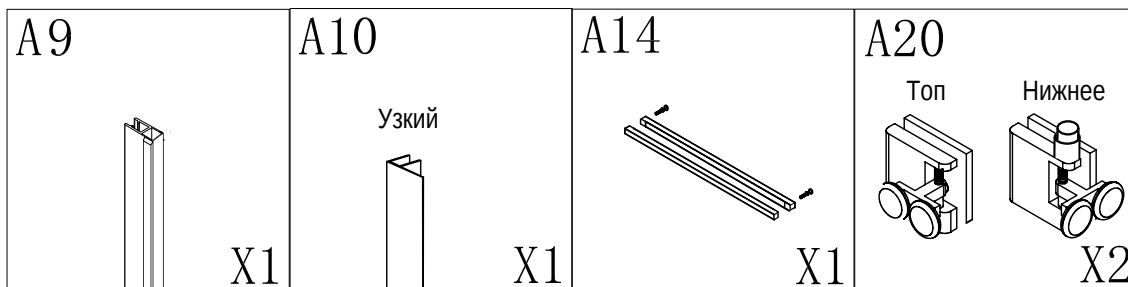


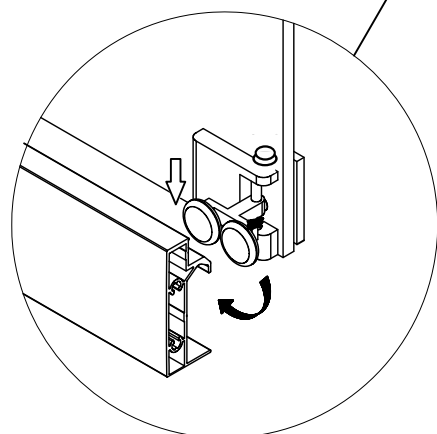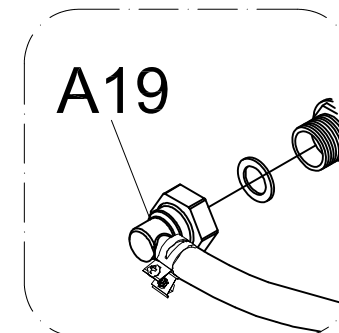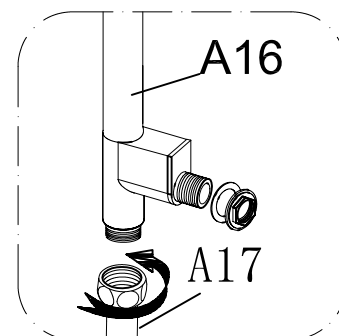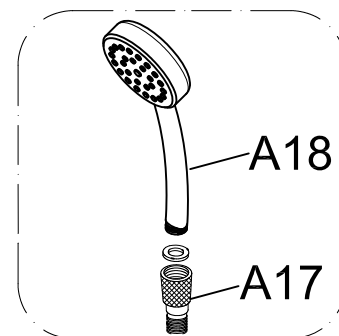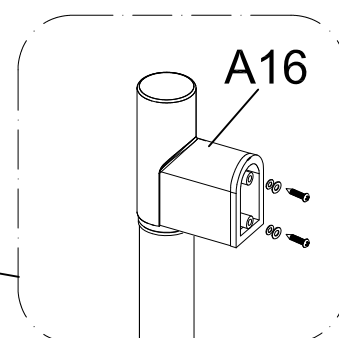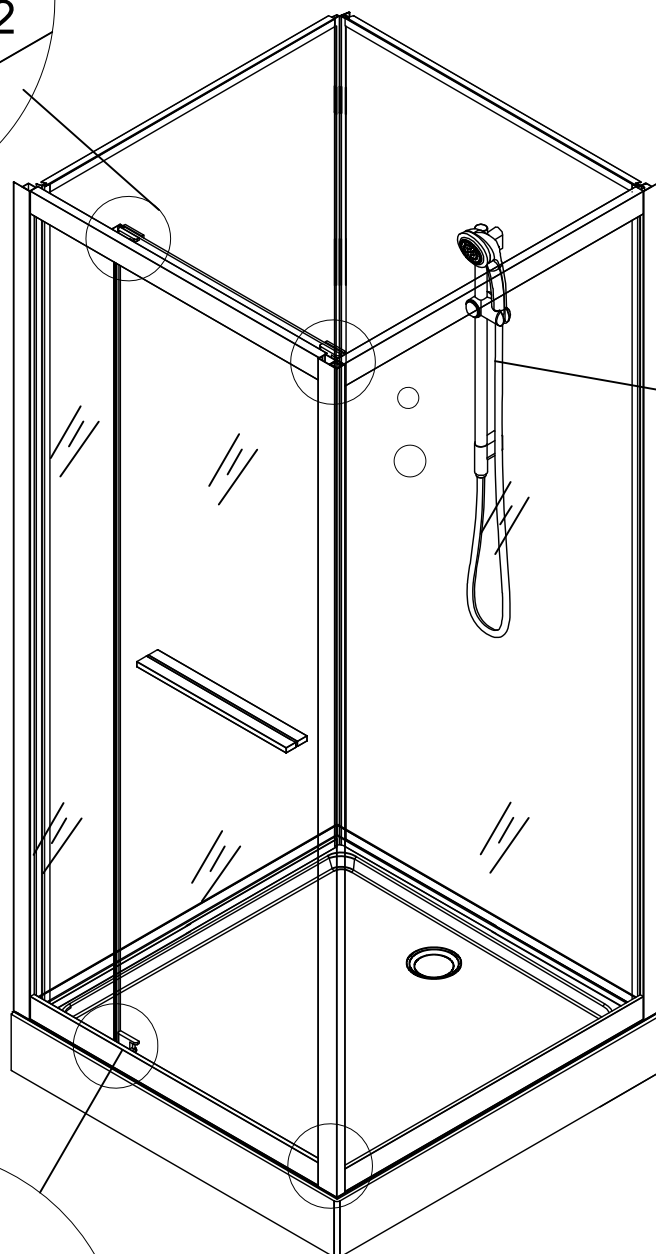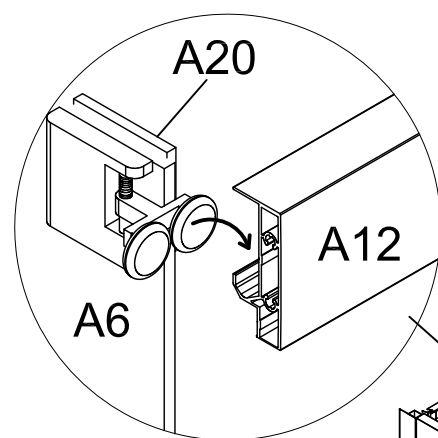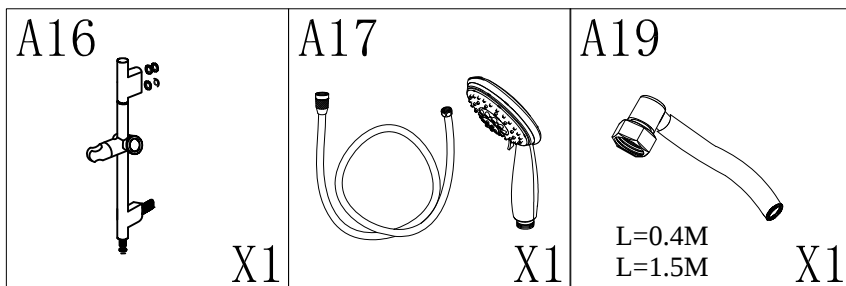

A11	A13	A29	A30
X2	X1	X2	X1

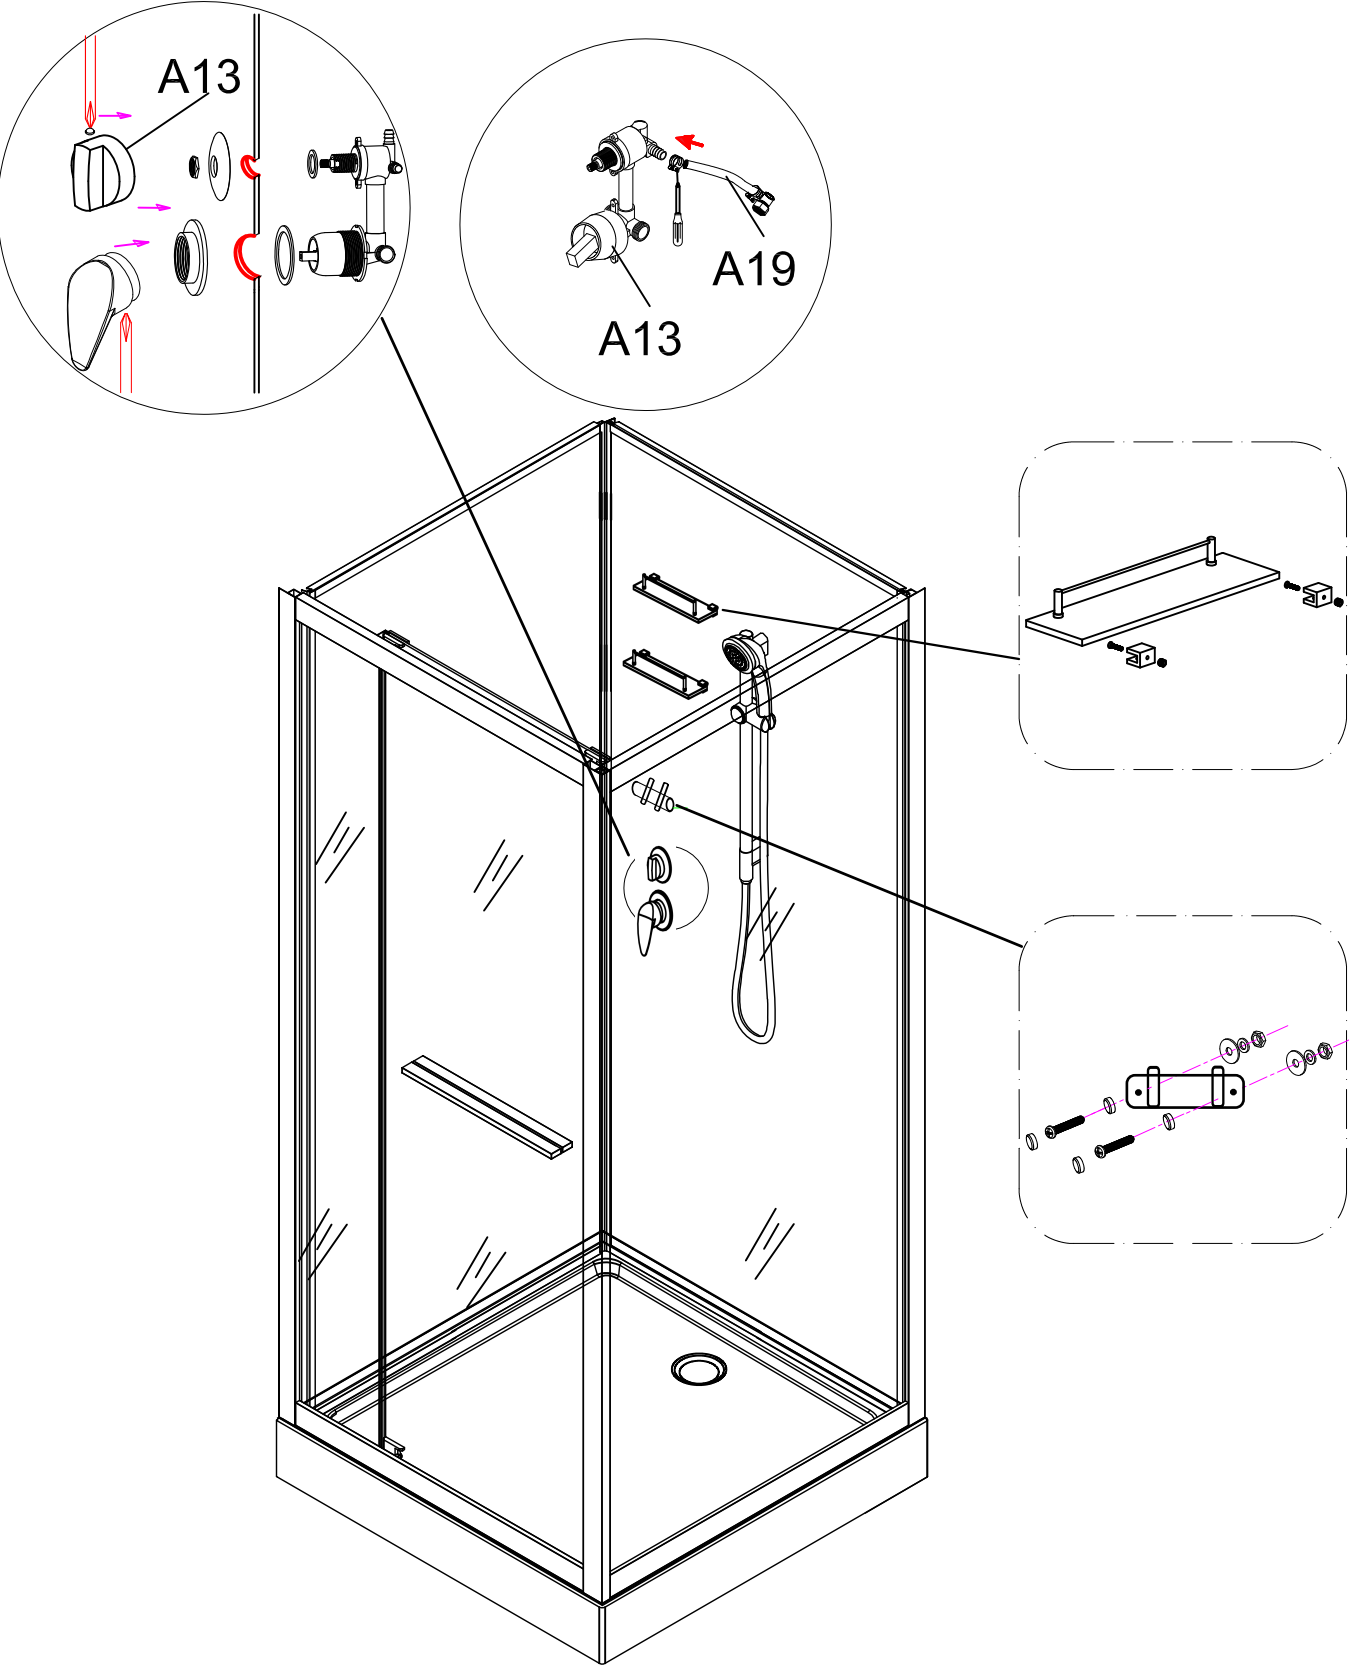

A26  X1	A27  X1	A28  X1
--	--	--

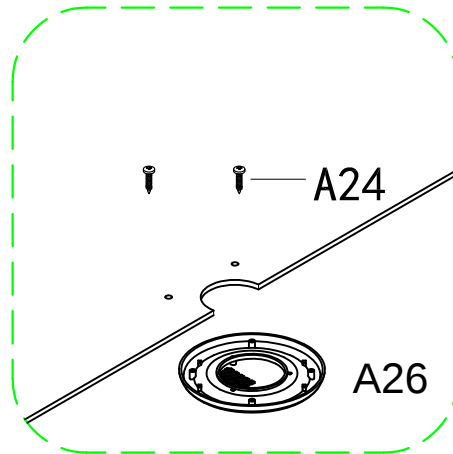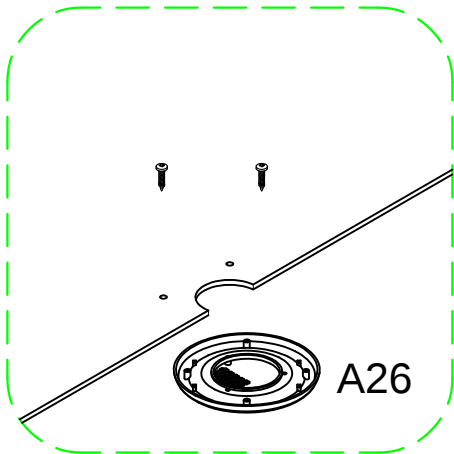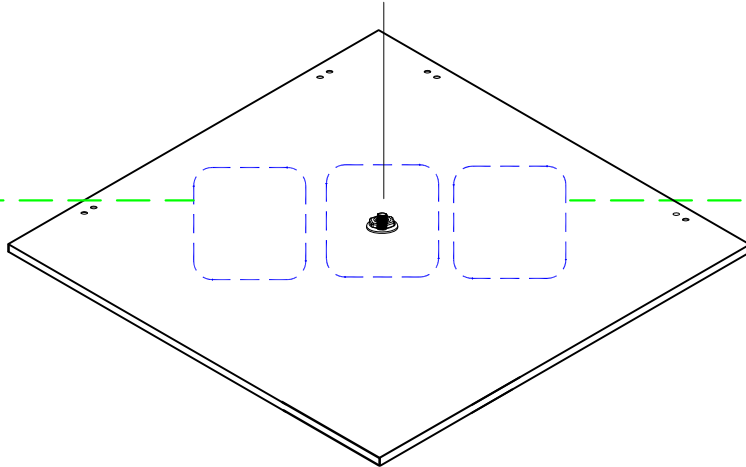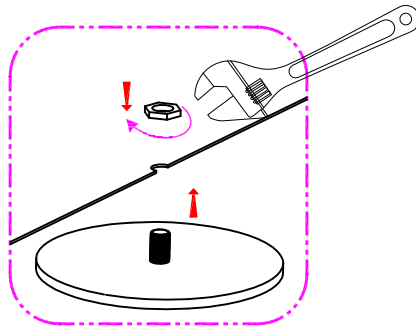

A29



X2

